






## Assembly instructions Agility V-Slalom / Agility Slalom FCI compliant

Our slalom set can be set up as a **V-slalom** or as a normal **agility slalom**, FCI compliant.

Attaching the slalom poles at an angle where they are slightly tilted outwards is mainly used in training. The purpose of this „feature“ is to make it easier for dogs to learn the slalom. It helps beginners in particular to make the movement through the poles more fluid.

This feature is often used in conjunction with so-called „weave poles“ (beginner slaloms with adjustable poles). As the dog becomes more confident, the poles are gradually raised until they are completely straight, as required in competitions.

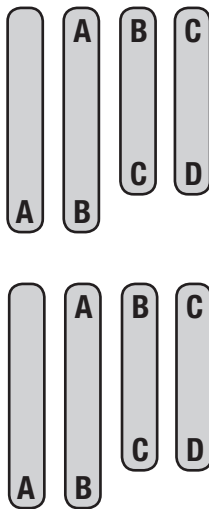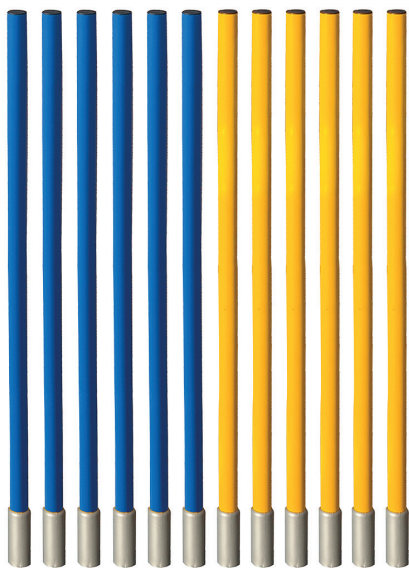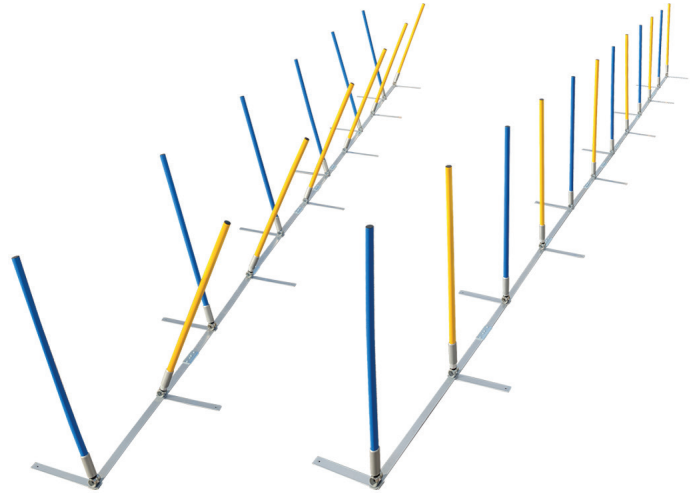


### You will receive in one package:

- 6 x slalom poles, blue
- 6 x slalom poles, yellow
- 8 x base plates (these are marked with letters on the ends)
- 7 x connectors for base plate
- 12 x metal anchors
- Various screws, Allen key et cetera

### Tip: The construction is easier in a team


1. Unpack the V-Slalom and lay all parts neatly on the floor.

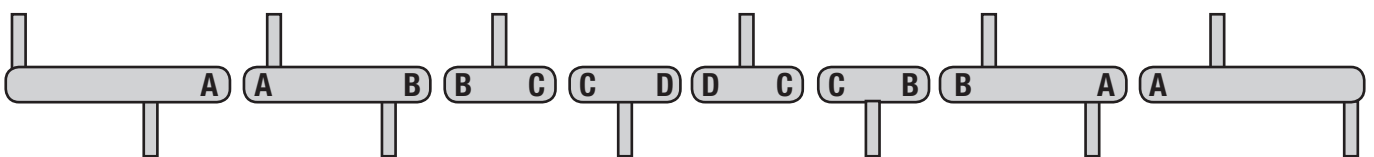

2. Place the 8 base plates on the floor in this order.

**IMPORTANT:** Now turn the outriggers to the correct side and screw them tight.

**3.** Then connect the base plates with the metal connectors and screw them tightly (Allen key is included).

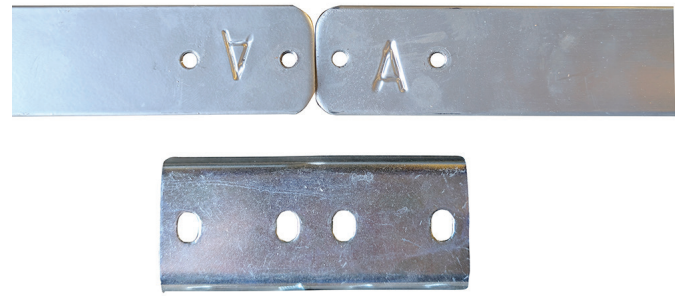


**4.** Finally, screw the poles onto the thread and tighten them.

The order of the colors is entirely up to your taste.

You can freely choose the angle of the poles from 0° to 90° vertically.

The angle is fixed by screwing the pole tightly.

The slalom is now fully assembled and can be fixed in the lawn with the metal anchors if necessary.

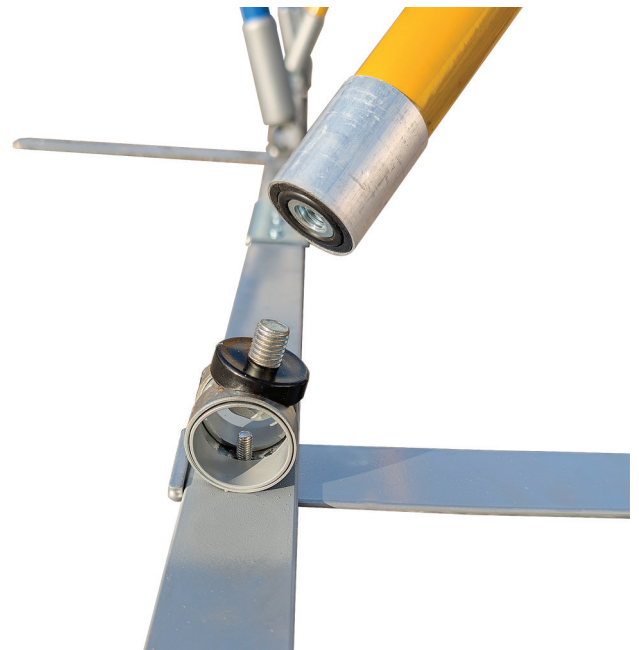

Parts of the slalom can also be used as weave poles (with 2 poles) in training.

